



# Automation Studio™ License Manager Quick Installation Guide

# Table of Contents

- 1 Introduction .....1-3
- 2 Automation Studio™ License Manager .....2-4
  - 2.1 Minimum Required Configuration.....2-5
  - 2.2 Installing Automation Studio™ License Manager.....2-6
  - 2.3 Minimum configuration of the License Manager.....2-8
    - 2.3.1 Configuration .....2-10
  - 2.4 Extras .....2-13
    - 2.4.1 Client and server in different machines .....2-13
    - 2.4.2 Servers with two network cards .....2-13

---

# 1 Introduction

Automation Studio™ is an innovative product always trying to meet the changing needs of its users. The purpose of the present guide is to help you in the installation procedure of the product.

## Licenses

Before its first launch, Automation Studio™ must obtain a “license”. All the information about one or more of your licenses is stored on a protection key. This information includes:

- The Automation Studio™ version;
- The Automation Studio™ edition (Professional, Educational, **Simulation** or Design);
- The workshops and modules that are activated;
- The license type (local or network).

In the case of a **local** license, the USB key must be connected directly into the USB port of the workstation where Automation Studio™ is installed. In this scenario, the license can only be used by the local user.

A **network** license is meant to be shared by multiple workstations. The USB key must then be connected into the USB port of a machine, which can be accessed by the workstations. That machine runs the “License Manager”.

This guide describes how you can configure Automation Studio™ depending on whether you use a local or a network license. In the latter case, if this task is your responsibility, you will also learn how to install the components required to use a network license, as well as how to manage your network licenses.

## 2 Automation Studio™ License Manager

This chapter does not apply to you if you plan to use local licenses.

In this chapter, you will learn how to install and start the components that are required to use network licenses. You will also learn how to use the License Management Interface to do a minimum configuration of your network licenses.



For more detailed information you can consult the full version of the “Installation and Administration User guide” available for download on the [Client Zone](#).



We have recently changed the process to access the Technical Support portal, please follow the instructions below:

1. Use the following link to register to the new Client Zone which gives access to more content : <https://www.famictech.com/en/Registration>;
2. On the registration process, use the same email address used to register your product. If you would like to make a change, please contact us;
3. Follow the link sent by email to activate your account; in this moment you should be login in your account.
4. Log off and log in again so your access permissions are applied;
5. You can from now on access to the Support Portal at any time by clicking on the “Client Zone” button;



Figure 2-1: Client zone

6. Click on “Technical Support Portal” to connect automatically.



Figure 2-2: Technical support portal

## 2.1 Minimum Required Configuration

Please be sure to have the minimum required configuration:



**Operating System (32-bit or 64-bit):** Windows 8.1, 10, 11 or Windows Server 2008R2 SP1, 2012, 2012R2, 2016 and 2019.



**Protocol:** TCP/IP.



**Disk space:** 100 MB of free space



USB port required, to support the protection key

## 2.2 Installing Automation Studio™ License Manager

This section explains how to install the Automation Studio™ License Manager, in the case where your organization wants to host its own server. If the machine that hosts your server belongs to a third party organization, you can proceed to section 2.3 *Minimum configuration of the License Manager*.

This document assumes that the required version was downloaded and that the zip file was unzipped.



**To install the application, the user must have administrative rights.**

To start the installation execute the file “setup.exe”, from the folder *ASNETLM 9.X.0.XX*. Select the language and click on “Next”;

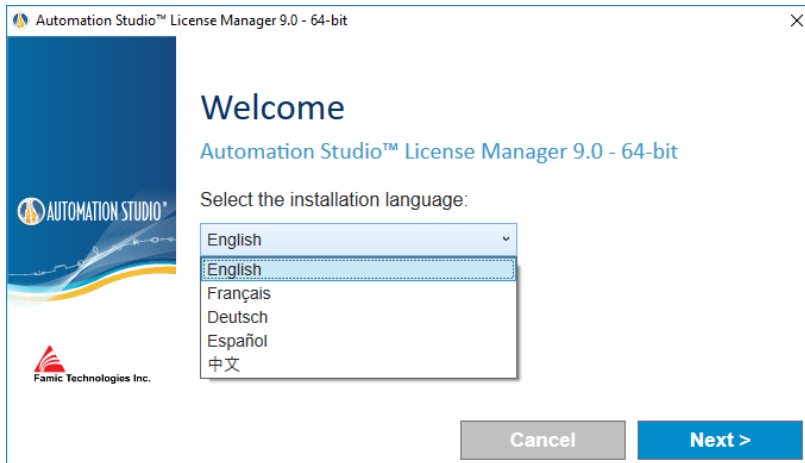


Figure 2-3: Language selection

Read the license agreement. Click “I accept ...”, and then click on “Next”. This window will be displayed:

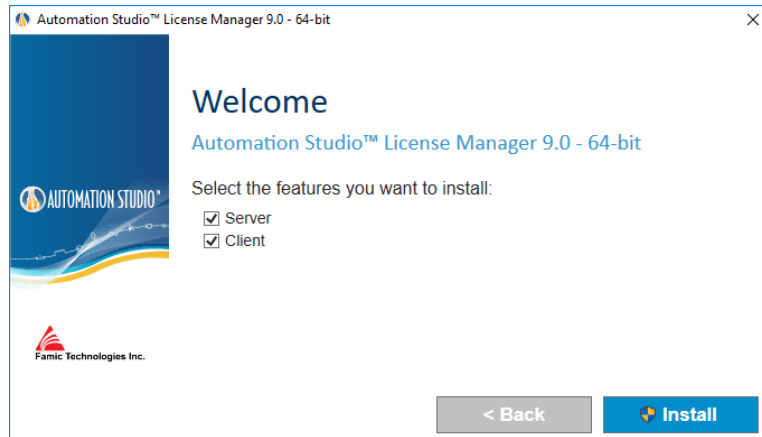


Figure 2-4 : Automation Studio™ License Manager Installation

If you plan to manage the licenses from the computer where the server service is installed, select both the “Server” and “Client” check boxes and click “Install” and follow the wizard to install.

If you plan to manage the licenses from another computer, remote access, please see [2.4.1 Client and server in different machines](#).

## 2.3 Minimum configuration of the License Manager

Before you start the License Management Interface, check that:

- The keys with your licenses are connected to the USB port of the computer where Automation Studio™ License Manager (Server) it is installed;
- The Automation Studio™ License Manager is running.



If a firewall is active on the machine that runs the Management Interface, make sure the communication with the Automation Studio™ License Manager is allowed. The communication is done using the ports 8095.

Once the Management Interface has been installed, it can be started by clicking on the “Automation Studio License Management” shortcut that has been created in “Start” → “Programs” → “Automation Studio License Management”:



Figure 2-5: Automation Studio License Management

The “Authentication” dialogue will appear and prompt you for your administrator name and password:

Automation Studio License Manager - Logon

User name: administrator

Password: admin

Sign using Windows Domain user

Sign In

Forgot your password ?    Advanced >>

Figure 2-6: “Authentication” Dialogue for the License Management Interface




The management interface will only start with a user account that has been tagged as an administrator in the License Manager. The user “**administrator**” is initially created for you, with the password **admin**.



The Management Interface window includes a sidebar on the left side (*Figure 2-7: Sidebar, License Management Interface*), with which you select what you wish to display in the main part of the window. The information shown in this main part will evolve according to the current action.

The sidebar is divided into two groups: “License Manager” and “Administration”. Click the title of a group to show its contents.

Finally, you can hide the sidebar by clicking on the pushpin displayed in the top right corner of the sidebar. A “Menu” button will then replace the sidebar. Drag the mouse on this button to display the sidebar.

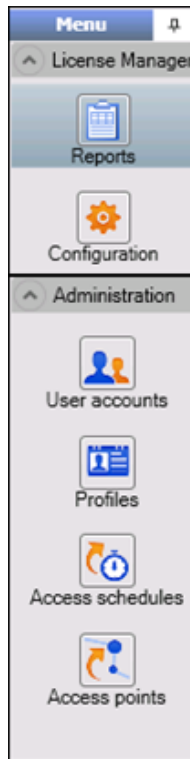

*Figure 2-7: Sidebar, License Management Interface*


## 2.3.1 Configuration




You can access the “Configuration” screen by clicking on the  icon in the sidebar (under the “License Manager” group).

The “Configuration” screen allows you to define the network licenses bought by your organization. You can also update or delete licenses.

### Defining a New License

You can define a new license by clicking on the  button above the list. You can also right-click on the list and choose “Add” in the drop-down menu that appears.

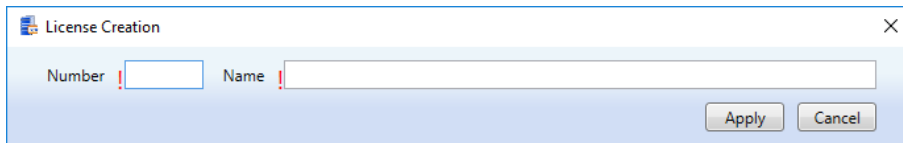


The image shows a dialog box titled "License Creation" with a close button (X) in the top right corner. It contains two input fields: "Number" and "Name", each with a red exclamation mark icon to its left. At the bottom right, there are two buttons: "Apply" and "Cancel".

Figure 2-8: Enter the key information

Then, you have to fill the “Number” and “Name “. You can put any information you choose in the “Name” field. Your license numbers were given to you when you bought them and they correspond with the five digits from the USB key.

Press the “Apply” button.

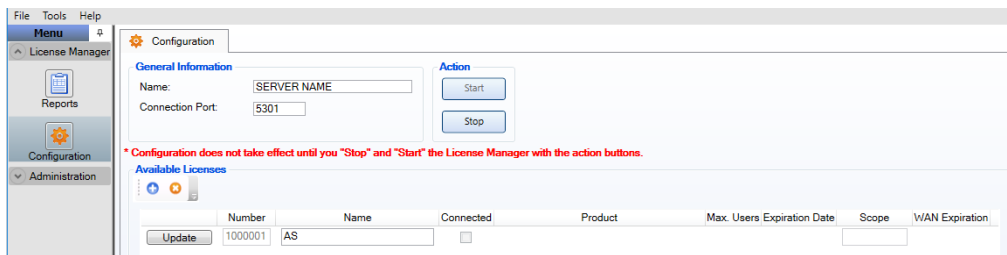

The image shows the License Manager Configuration screen. On the left is a sidebar with a "Menu" button and a "License Manager" group containing "Reports", "Configuration", and "Administration". The main area is titled "Configuration" and has a gear icon. It is divided into "General Information" and "Action" sections. The "General Information" section has "Name:" (SERVER NAME) and "Connection Port:" (5301) fields. The "Action" section has "Start" and "Stop" buttons. A red message reads: "Configuration does not take effect until you 'Stop' and 'Start' the License Manager with the action buttons." Below this is an "Available Licenses" section with a table and an "Update" button.

Number	Name	Connected	Product	Max. Users	Expiration Date	Scope	WAN Expiration
1000001	AS	<input type="checkbox"/>					

Figure 2-9: Enter the key information

A message in red will appear requesting to reboot the License Manager, please click on the "Stop" and then "Start" buttons.

## Grant license to the profiles

Before to connect from Automation Studio client, the license needs to be granted.

Select the “Administration” group, “Profiles” and double click on the only existing profile “All users”.

In the top right side under the “License(s)” select the “Granted” and “Apply”.

This should complete the network license configuration.

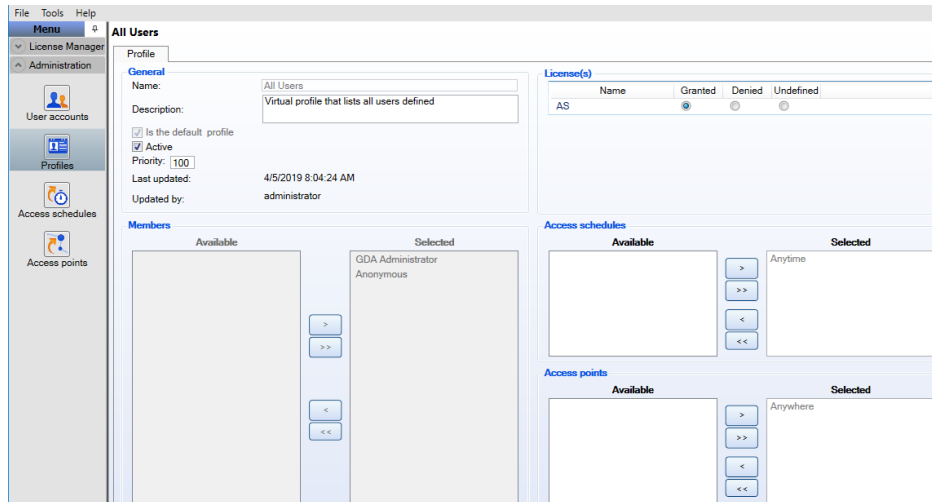


Figure 2-10: License “Profiles” Screen

## Updating a Network License

You can update any of your network licenses if you want to:

- Increase you license capacity;
- Upgrade your license for a new version of Automation Studio™;
- Add workshops and/or modules to your license.

To update a license, you must first contact *Famic Technologies Inc.* at [production@famictech.com](mailto:production@famictech.com), to get the Update Code for your license.




If you have an annual maintenance plan, the update codes will be automatically generated for your license when a new version is available and they will be all the

time at your disposal on the support portal under the “Key registry” tab for the keys registered under your name.

Once you have received your Update Codes, you can click on the “Update” button (see *Figure 2-9: Enter the key information*) to proceed with the actual update (the button is to the left of the license number).

The “License Update” dialogue will appear:

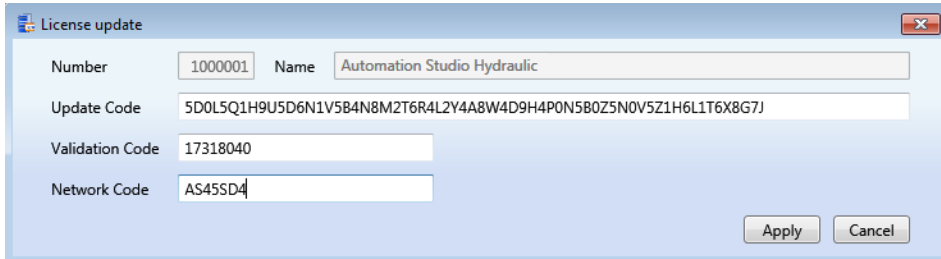

Number	1000001	Name	Automation Studio Hydraulic
Update Code	5D0L5Q1H9U5D6N1V5B4N8M2T6R4L2Y4A8W4D9H4PON5B0Z5N0V5Z1H6L1T6X8G7J		
Validation Code	17318040		
Network Code	AS45SD4		

Apply Cancel

*Figure 2-11: “License Update” dialogue*

Enter the codes you have received in the “Update Code”, “Validation Code” and “Network code” fields, and click on “Apply”.



The codes in *Figure 2-11: “License Update” dialogue* are not valid. Use **ONLY** the codes sent to you by Famic Technologies Inc. for your license.



It is recommended to copy and paste the codes in their respective fields instead of typing them out.



If you do not have a “Network Code”, these codes are possibly meant for a standalone license. Before you continue, please verify the key type.

## 2.4 Extras

### 2.4.1 Client and server in different machines

If you plan to install the License Management Interface (“Client”) and Automation Studio™ License Manager (“Server”) on different machines, select only “Server” or “Client” on *Figure 2-4 : Automation Studio™ License Manager Installation* and click “Next”.

In this case, you must edit a configuration file to ensure access to the configuration screen:

1. Open the file “ASNETLMPref.config” with a text editor (e.g. Notepad), you will find the file in: “C:\ProgramData\Famic Technologies\Automation Studio Network License Manager”.
2. The fourth line is the line where you have to do modifications:  
`<add key="ConfAccessIpList" value="127.0.0.1;::1"/>`
3. Modify this line as it follows:
  - To access the Automation Studio™ License Manager from a client located on a certain machine:  
`<add key="ConfAccessIpList" value="127.0.0.1;[IP];::1"/>` (replace the [IP] with the computer’s IP where the client will be installed)
  - To access the Automation Studio™ License Manager from a client located on any computer from a network:  
`<add key="ConfAccessIpList" value="127.0.0.1;*;::1"/>` (replace the [IP] with the \*)
4. Save the file in the new configuration.

### 2.4.2 Servers with two network cards

If your server has two or more Ethernet cards, you have the possibility to choose, which card the Automation Studio™ license manager should use. To do this open the file “ASNETLM.config.xml” (located in C:\ProgramData\Famic Technologies\Automation Studio Network License Manager) with a text editor (e.g. Notepad). The second line is the line where you have to do modifications; at the end of the line add **EthernetAdapter="IP Address”**.



Enter the IP address for the selected Ethernet card. The line should have the configuration shown in the following example and figure:

```
<ASLSERVICE name="servername"
```

## ServiceDefaultPort="5301" EthernetAdapter="192.168.0.4">

```
1 <?xml version="1.0" encoding="ISO-8859-1"?>
2
3 <ASLService name="servername" ServiceDefaultPort="5301" EthernetAdapter="IP address">
4   <Organization orgId="default" name="default"/>
5   <License orgId="default" keyId="1000001" name="test"/>
6 </ASLService>
```

Figure 2-12: Ethernet adapter configuration